


Instructions for Blade Agitator Replacement for the Hi-Blend Multi Speed Super Blender

Removing the Retainer Nut under the Jug

Turn the jug upside down and place the Hi-Blend wrench over the drive spline, slotting it into the gap in the retainer nut. Rotate the wrench anti-clockwise.



If you do not have a wrench you can use a long screwdriver. Insert the screwdriver between the retainer nut wall and the drive spline. Once the retainer nut is loosened you can unscrew it by hand to remove it.

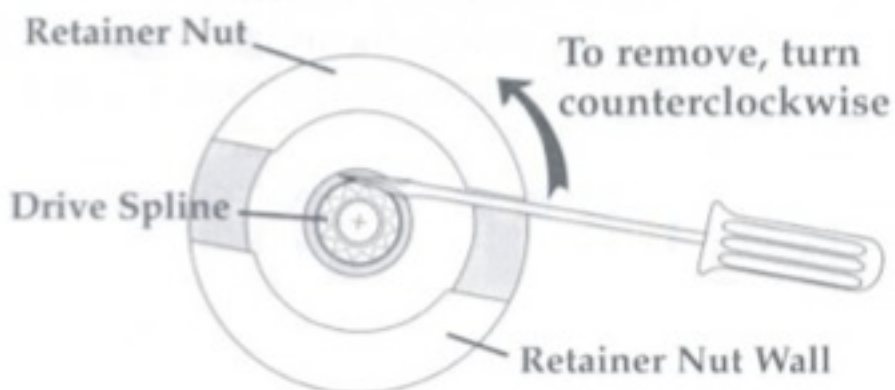

Removing the blade (agitator)

The blade assembly can easily be lifted out of the jug once the retainer nut has been removed. *Be careful when removing the blade assembly as the blade is sharp.*

Replacing the Blade Assembly

Put the Blade agitator through the hole at the bottom of the jug. While holding the agitator in place turn the jug upside down and screw the retainer nut onto the agitator by hand. Insert the wrench over the drive spline (or a long screwdriver if you don't have a wrench) turn clockwise until it stops.

Important Note: If it is not tight enough the jug noise will increase when operating.

Do Not over-tighten as this can cause the jug to crack